GMLighting **Xenon Accent Lighting XP20 Mounting and Wiring Instructions**

Surface Mount

1. Screw surface ring to surface with screws provided.
2. Feed fixture wires through notch in surface ring.
3. Compress springs on either side of the fixture and insert into surface ring.
4. Re-lamp using small screwdriver and pry inner lamp holder from fixture and carefully remove.
5. Parallel wire to 120/12v AC Electronic Transformer (See diagram).

Recessed Mount

1. **Drill** a 2-3/8" diameter hole.
2. Remove surface ring from fixture and discard.
3. Feed wires through hole and install fixture into drilled hole by compressing springs.
4. Re-lamp using small screwdriver and pry inner lamp holder from fixture and carefully remove.
5. Parallel wire to 120/12v AC Electronic Transformer (See diagram).

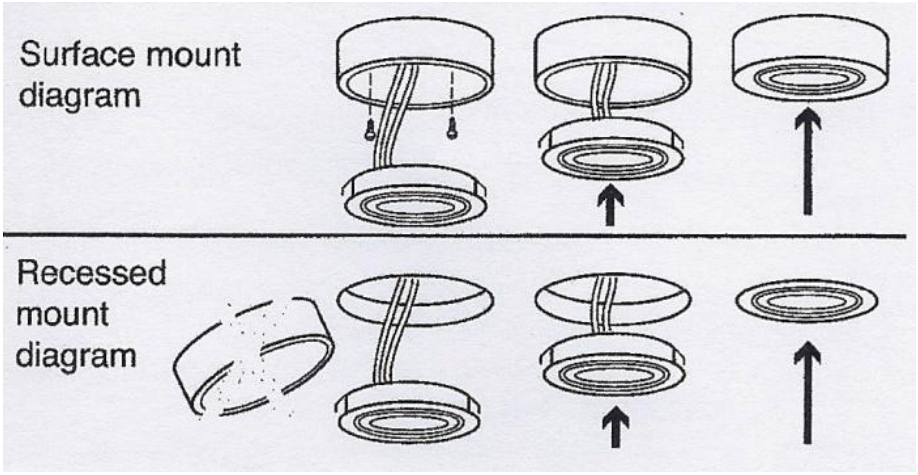

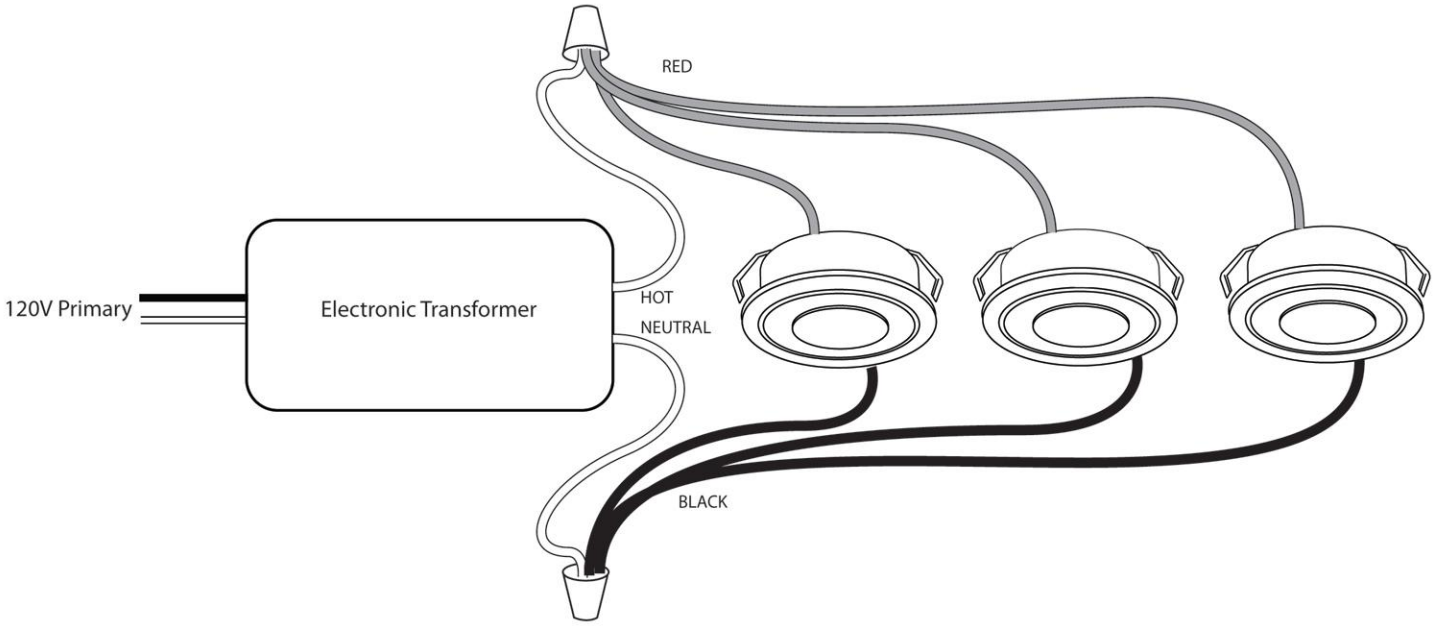

9830 W. 190th St. • Unit F • Mokena, IL 60448 • Toll-Free: (866) 671-0811 • FAX: (708) 478-2640 • www.gmlighting.net